

## D1255A Command Center

### User Functions

P/N 50245B

### User Instructions

L-604

SECURITY SYSTEM USER'S GUIDE

[Basic Commands]

L-603

SECURITY SYSTEM OWNER'S MANUAL

[Advanced Commands]

[P/N 33267D]

SECURITY SYSTEM OWNER'S MANUAL SUPPLEMENT

[Access Control Commands]

L-603 & L-604 are packages of 5 each.

## Command Center Keys



### Command Center Function Keys

COMMAND	Combine with one or two numeric keys to perform a function. [Area-specific]
ENT / YES	Complete the entry of your passcode. Select the menu item displayed.

### Command Center Function Keys

ESC / MENU

Enter the Command Menu

Return from Command Menu to idle display

PREV 

Move backward to the previous item on a list \*

NEXT 

Move forward to the next item on a list \*\*

[If ENT = YES, NEXT = NO]

\* Including first to last item.

\*\* Including last to first item.

### Arming Commands

CMD 1	Master Arm [Delayed]
CMD 11	Master Arm [Instant]
CMD 2	Perimeter Instant Arm
CMD 3	Perimeter Delay Arm
CMD 8	Perimeter Partial Arm

All individual area arming, regardless of Command Center Scope.

### Family of 4's Commands

CMD 4	Silence Trouble Sounder
CMD 40	View Memory
CMD 41	Test Report
CMD 42	Status Report
CMD 43	Remote Program Connect
CMD 44	Walk Test
CMD 45	Change Time / Date
CMD 47	Reset Sensors
CMD 49	Change Display

### Family of 5's Commands

CMD 50	Move to Area
CMD 51	Extend Closing [Area-Specific]
CMD 52	Enable / Disable Sked and / or Change Sked Time
CMD 53	Delete Passcode
CMD 54	Relay On / Off
CMD 55	Change Passcode
CMD 56	Add Passcode *      Add Levels      Add Card [Dx412]
CMD 57	Display Area Default Text
CMD 58	Fire Test
CMD 59	Display Panel Software Revision



### Special Commands

CMD 0	Bypass Points
CMD 00	Unbypass Points
CMD 6	Watch Mode *
CMD 7	Special Alert *
CMD 9	Police Alert *

\* Area-Specific Function

### Advanced Commands

VIEW AREA STATUS \*

VIEW POINT STATUS \*

\* Must be programmed in Function List in order to be used.

### “Back Door” Menu

99 ENT :

VIEW LOG

PRINT LOG

DEFAULT TEXT [CMD 57]

SERVICE WALK

DISPLAY REV. [CMD 59]

### “Back Door” Menu

99 ENT :

VIEW LOG

PRINT LOG

DEFAULT TEXT [CMD 57]

SERVICE WALK

DISPLAY REV. [CMD 59]

## Access Control Commands [D9412/D7412]

### CMD 46

Cycle Door

Unlock Door

Secure Door

### CHANGE ACCESS LEVELS \*

\* Must be programmed in Function List in order to be used.

Your every wish is our commands.

Thanks for Your Attention